


 

 



 







 





 









 







 

 

 







 

 

 

 







 












 








 
 
 
 
 







 


Original		Replacement		Original		Replacement	
	Power		Power		Movie		Red
	Setup		Options		Music		Green
	DTV		D. Menu		Photo		Yellow
	HDMI/AV		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	Disk		List		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Exit		Exit
	7		7		Home		Smart
	8		8		Edit		TV/R
	9		9		Copy		3D
	0		0		Repeat		Shift + Text
	TTX		Text		Rec		Rec
	EPG		Guide		Play		Play





Original Replacement

	Pause		Pause
	Stop		Stop
	<</Rev		<<
	>>/FF		>>
	>>		>>
	<<		<<
	PG Up		Ch +
	Pg Dn		Ch -
	Audio		Dual
	Sub-T		Subt
	FAV		Pre Ch
	Info		Info
	Mute		Mute
	DVD		Blue
	Timer		Shift + AV
	T/R		Format

Original Replacement

