



Original	Replacement	Original	Replacement
 Power	 Power	 E-Zoom+	 + / Play
 Source Search	 Source	 Pointer	 Shift + Auto
 Enter	 Enter	 E-Zoom-	 - / Stop
 Up	 Up	 Color Mode	 Mode
 Down	 Down	 Page Up	 Shift + Up
 Right	 Right	 Page Down	 Shift + Down
 Left	 Left	 USB	 Volt / Focus
 Menu	 Menu	 Computer	 Comp / Video
 ESC	 Shift + Menu	 Video	 Shift + Comp / Video
 Vol+	 Vol + / Page +	 LAN	 3D / Invert
 Vol-	 Vol - / Page -	 1	 Shift + Vol + / Page +
 Help	 Help / Info	 2	 Shift + + / Play
 Freeze	 Freeze / Timer	 3	 Shift + Volt / Focus
 A/V Mute	 Blank / Mute	 4	 Shift + Vol - / Page -
 Auto	 Auto	 5	 Shift + - / Stop
 User	 Shift + Mode	 6	 Shift + Help /
 Aspect	 Eco / Aspect	 7	 Shift + Eco / Aspect



