 




 


 
 

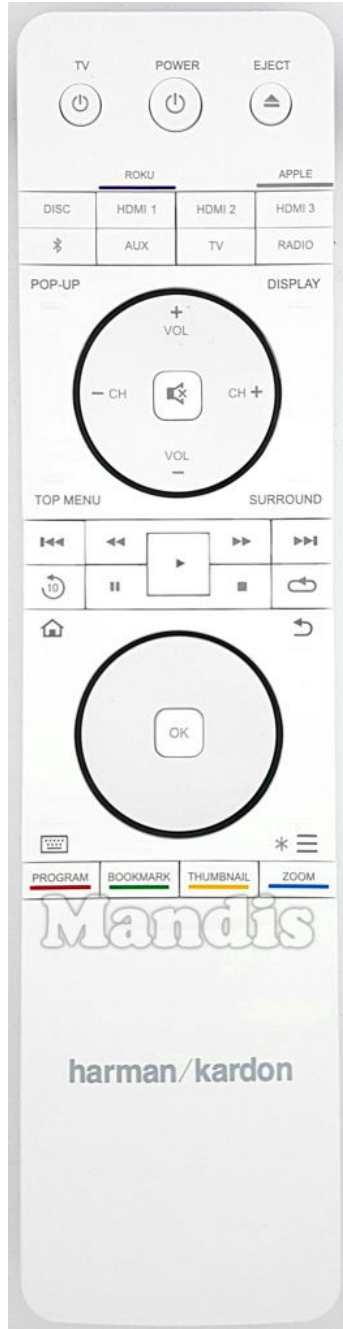 




 
 

 
 

 

 

 
 




 




 


















 
 

 




 

Original	Replacement
 Power	 Power
 Pop Up	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Top Menu	 Menu
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Back	 Back
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 [:::]	 Guide
 Red/Program	 Red
 Green/Bookmar	 Green
 Yellow/Thumbnail	 Yellow
 Blue/Zoom	 Blue

 









 

 


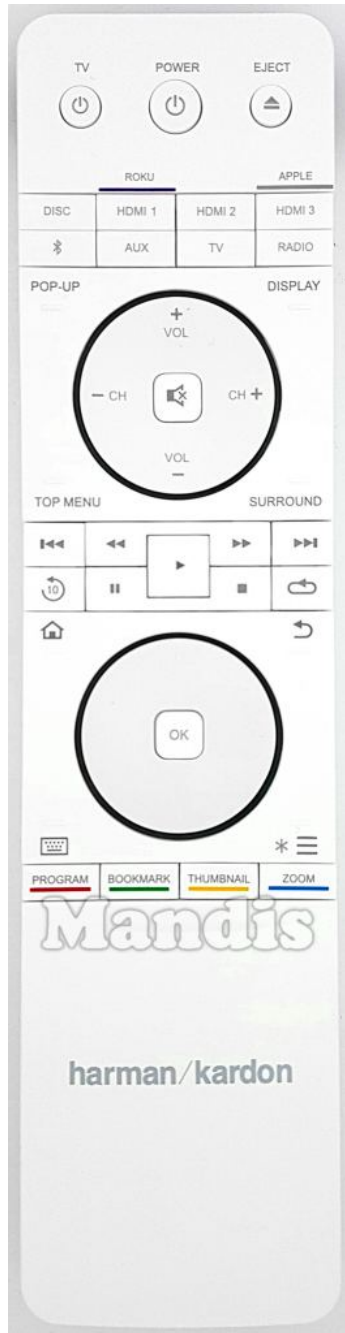



Original	Replacement
 Power	 Power
 Eject	 Eject
 Disc	 1
 HDMI1/Roku	 2
 HDMI2	 3
 HDMI3/Aple	 4
 Bluetooth	 5
 AUX	 6
 TV	 7
 Radio	 TV/R
 Pop Up	 D. Menu
 Display	 Info
 Top Menu	 Menu
 Surround	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Recall	 Pre Ch
 (10)	 Media
 [:::]	 Guide
 Home	 Smart
 *≡	 Options
 Back	 Back
 Up	 Up
 Down	 Down

 





 






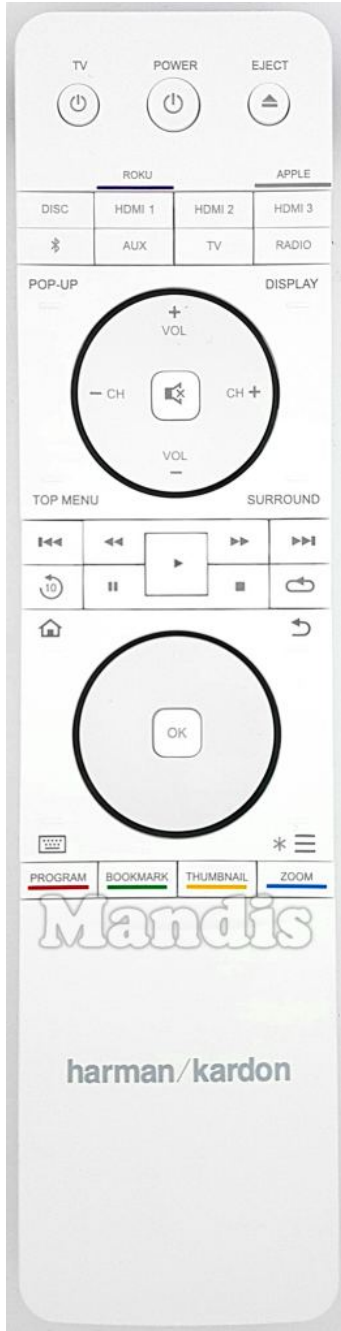




 


 

 



 







Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Red/program	 Red		
 Green/Bookmar	 Green		
 Yellow/Thumbnail	 Yellow		
 Blue/Zoom	 Blue		

 
Original	Replacement





	Original	Replacement	Original	Replacement
	Power			
	Pop Up			
	Play			
	>>			
	<<			
	Pause			
	Stop			
	OK			
	Up			
	Down			
	Right			
	Left			
	Vol+			
	Vol-			
	Mute			



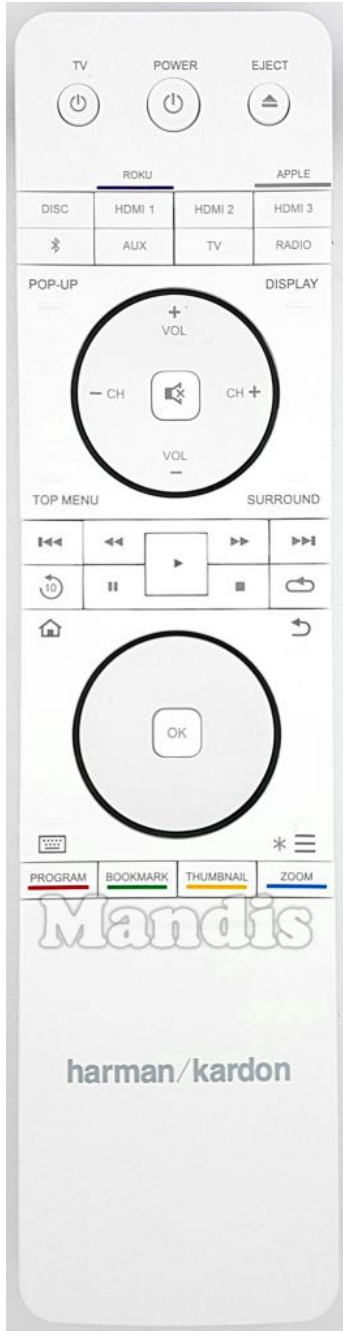

Original	Replacement
Power Tv	Power
Eject	Eject
Pop Up	D. Menu
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Recall	Back
Up	Up
OK	Ok
Down	Down
Right	Right
Left	Left
Red/Program	Red
Green/Bookmar	Green
Yellow/Thumbnail	Yellow
Blue/Zoom	Blue
CH+	Ch +

Original	Replacement
CH-	Ch -

