



| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  Aspect |  3D |
|  Auto |  Smart |  Audio |  Dual |
|  Mute |  Mute |  Display |  Info |
|  1 |  1 |  CH+ |  Ch + |
|  2 |  2 |  CH- |  Ch - |
|  3 |  3 |  Menu |  Menu |
|  4 |  4 |  Exit |  Exit |
|  5 |  5 |  Up |  Up |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Left |  Left |
|  9 |  9 |  OK |  Ok |
|  0 |  0 |  Source |  AV |
|  -/-- |  Shift + Guide |  P.Mode |  Shift + Format |
|  Recall |  Back |  S.Mode |  Shift + Dual |
|  Vol+ |  Vol + |  Sleep |  Sleep |
|  Vol- |  Vol - |  FAV |  Pre Ch |





| Original | Replacement |
|----------|--------------|
| FAV- | Shift + Ch - |
| FAV+ | Shift + Ch + |
| EPG | Guide |
| Text | Text |
| Hold | Options |
| Tv/Radio | TV/R |
| Subtitle | Subt |
| Index | List |
| Reveal | D. Menu |
| Subpage | Eject |
| Media | Media |
| Size | Format |
| Play | Play |
| Pause | Pause |
| << | << |
| >> | >> |
| Rec | Rec |

| Original | Replacement |
|----------|-------------|
| Stop | Stop |
| I<< | I<< |
| >>I | >>I |
| Red | Red |
| Green | Green |
| Yellow | Yellow |
| Blue | Blue |

