





 
 

 

 

 



 

 
 
 


 
 











 




 
 






 
 




 
 
 
 

 










Original		Replacement		Original		Replacement	
	Standby		Power		Mute		Mute
	Open/Close		Eject		Setup		Options
	Subtitle		Subt		Title		3D
	Audio		Dual		Source		AV
	Angle		Guide		Menu		Menu
	PS/IS		TV/R		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Rec/OTR		Rec
	0		0		Disc OP		Media
	Goto		List		Timer		Shift + AV





Original	Replacement
Play	Play
Pause/Step	Pause
Stop	Stop
Return	Back
I<<	I<<
>>I	>>I
<<	<<
>>	>>
DVD	Red
TV	Green
DV	Yellow
USB	Blue
Edit	Shift + Options
Finalize	D. Menu
Erase	Shift + Subt
Quality	Shift + TV/R
ADD/Clear	Exit

Original	Replacement
Random	Format
Zoom	Shift + Eject
A-B	Pre Ch
Repeat	Text
Display	Info
Program	Sleep
Scan	Smart

