

 
 




 

 


 

 
 
 
 
 



 


 
 

 

 

 
 

 

 
 


 
 
 
 







 

 






 

 





Original	Replacement	Original	Replacement
	Standby - On		Power
	TV / DVD		AV
	Edit		TV/R
	Select		Info
	CH+		Ch +
	Up		Up
	Down		Down
	CH-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	Menu Disc		D. Menu
	Menu System		Menu
	Timer		Sleep
	T/C		Guide
	Browser		Smart
	Tuner		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Stop		Stop
	Play		Play
	Rec		Rec
	Pause		Pause
	Rec Mode		Shift + Rec
	I<<		I<<
	>>I		>>I





Original	Replacement	Original	Replacement
 Return	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Tv Vol-	 Vol -		
 Tv Vol+	 Vol +		







Original	Replacement
Standby - On	Power
TV / DVD	TV/R
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
OK	Ok
Menu System	Menu
Timer	Sleep
T/C	Guide
Tuner	Subt
1	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
0	0
Rec	Rec
Return	Back
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Tv Vol-	Vol -
Tv Vol+	Vol +

