

 

 
 
 





 

 



 


 

 
 
 
 
 



 


 

 

 

 


 
 

 

 







 






 

 



Original	Replacement
 Standby - On	 Power
 TV / DVD	 AV
 Edit	 TV/R
 Select	 Info
 CH+	 Ch +
 Up	 Up
 Down	 Down
 CH-	 Ch -
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu Disc	 D. Menu
 Menu System	 Menu
 Timer	 Sleep
 T/C	 Guide
 Browser	 Smart
 Tuner	 Subt

Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop	 Stop
 Play	 Play
 Rec	 Rec
 Pause	 Pause
 Rec Mode	 Shift + Rec
 I<<	 I<<
 >>I	 >>I





Original		Replacement		Original		Replacement	
	Return		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Tv Vol-		Vol -				
	Tv Vol+		Vol +				





Original	Replacement
Standby - On	Power
TV / DVD	TV/R
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
OK	Ok
Menu System	Menu
Timer	Sleep
T/C	Guide
Tuner	Subt
1	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
0	0
Rec	Rec
Return	Back
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Tv Vol-	Vol -
Tv Vol+	Vol +

