



Original	Replacement
Power	Power
Green / Prog.	Green / APP / Repeat
Green / Prog.	TV/Radio /
Yellow / Status	Yellow / YouTube / Repeat
Yellow / Status	Info / Angle
Blue / Guide	Blue / Prime Video / Random
Blue / Guide	Guide / EPG / -/--
Red / Dec.	Red / Netflix / Search
Up	Up
Purple / Text	Display / Media
Purple / Text	Text / Goto
Exit	Exit / Cancel / Clear
Left / I<<	Left
Left / I<<	I<< / Preset-
OK	OK
Right / >>I	Right
Right / >>I	>>I / Preset+

Original	Replacement
Menu	Menu / Home
Vol+	Vol+
Down	Down
PR+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
PR-	CH- / Page-
1	1
2	2
3	3
Index / Mark	Fav / Marker / PC
4	4
5	5
6	6
0000	SHIFT + Exit / Cancel / Clear
7	7
8	8





Original	Replacement
	Power
	Green / APP / Repeat
	Yellow / Status
	Blue / Prime Video / Random
	Red / Netflix / Search
	Up
	Purple / Text
	Exit / Cancel / Clear
	Left
	OK
	Right
	Right / >>I

Original	Replacement
	Menu / Home
	Vol+
	Down
	CH+ / Page+
	Vol-
	Mute / Dimmer
	CH- / Page-
	1
	2
	3
	Fav / Marker / PC
	4
	5
	6
	Shift + Exit / Cancel / Clear
	7
	8





	Original	Replacement		Original	Replacement
	9	 9			
	SP / LP	 Smart / List			
	AV	 AV / Input / RDS			
	0 / --	 0			
	<< REW.	 << / Tune-			
	Play	 Play / Slow			
	>> F.FWD	 >> / Tune+			
	Rec	 Rec / Rec Mode			
	Stop	 Stop / Hold			
	Pause	 Pause / Step / Freeze			

	Original	Replacement		Original	Replacement

