

















 

 

 





 


 

 













Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info
 AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 TV/DTV	 TV/R
 Menu	 Menu
 Top Menu/[≡]	 Shift + Menu
 Back	 Back
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 <</F.T/L	 <<
 Play/?/TV/Radio	 Play
 >>/[-]/Guide	 >>








 






 





 




 

 










Original	Replacement	Original	Replacement
 Rec/>	 REC MODE Rec		
 Stop/[X]/I-II	 Stop		
 Pause/[+]/[...]	 Pause		
 ^/[--]	 AD SUBT Subt		
 v/[   ]	 PICTURE FORMAT Format		
 ZOOM	 ZOOM Eject		
 (↔)	 SETTINGS OPT Options		
 [ * ]/Music	 SOUND DUAL Dual		
 [ :: ]	 ECO 3D 3D		





Original		Replacement		Original	Replacement
	Power		Power		
	(i)		Info		
	Menu		Menu		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Top Menu	 + 	Shift + Menu		
	Back		Back		
	↑/[+]		Pre Ch		
	↓/[ ]		Guide		
	<<		<<		
	Play		Play		
	>>		>>		
	Stop		Stop		
	Pause		Pause		







 




 


 
 
 
 

 
 
 

 
 



Original	Replacement
	Power
	Info
	Green
	Yellow
	Blue
	Menu
	Up
	Down
	Right
	Left
	Ok
	Shift + Menu
	Back
	Guide
	Pre Ch
	Play

Original	Replacement
	>>
	Rec
	Stop
	Pause





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	Mute		Mute		(↔)		Media
	(i)		Info				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Top Menu		Shift + Menu				
	Back		Back				
	↑/[+]		Pre Ch				
	↓/[ ]		Guide				
	<<		<<				
	Play		Play				
	>>		>>				
	Pause		Pause				

