



Original	Replacement
On	Power
Off	+ Shift + Power
Mute	Mute / Dimmer
AVR	+ Shift + AV / Input / RDS
DVD	+ Shift + 2
> DVD	+ Shift + >> /
VID1	Smart / List
HDMI1	+ Shift + 1
Tape	+ Shift + 5
CD	+ Shift + 3
VID2	Display / Media
HDMI2	+ Shift + 6
AUX	+ Shift + 7
HDMI4	+ Shift + 4
HDMI3	+ Shift + 8
Sleep	Sleep / Timer
Preset ▲	CH + / Page+

Original	Replacement
Test	+ Shift + Text /
AM/FM	TV/Radio /
Vol+	Vol+
Preset ▼	CH- / Page-
OSD	+ Shift + Smart / List
Vol-	Vol-
CH./[≡?]	Info / Angle
Up	Up
SPKR/Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Prev. CH.	Exit / Cancel / Clear
1	1
2	2





































 
Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
Tun-M/[≡+]	Shift + CH+ /
9	9
0	0
Mem/[≡◇]	D.Menu / Top
Tuning ▲	Shift + Up
Red	Red / Netflix / Search
Direct/Green	Green / APP / Repeat
Clear/Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Tuning ▼	Shift + Down
Tone	Sound / Title

Original	Replacement
RDS	AV / Input / RDS
Night	Shift + Sleep / Timer
<</Skip Down	<< / Preset-
Skip Up/>>	>> / Preset+
[≡]	Text / Goto
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold
Pause DVD	Pause / Step / Freeze












Original	Replacement	Original	Replacement
Power On		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Night		Sleep / Timer	
Direct		D.Menu / Top	
[≡]		Text / Goto	
RDS		AV / Input / RDS	
SPKR/Menu		Menu / Home	
Up		Up	
Left		Left	
OK		OK	
Right		Right	

Original	Replacement	Original	Replacement
Clear		Exit / Cancel / Clear	
Down		Down	
Vol+		Vol+	
Mem/[≡◇]		Smart / List	
Vol-		Vol-	
CH./[≡?]		Display / Media	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Power Off	 + 	Shift + Power	





  



























Original	Replacement	Original	Replacement
Tun-M/[≡+]	 + 		
Digital/[≡X]	 + 		
Preset ▲	 + 		
Delay/Prev.CH.	 + 		
Preset ▼	 + 		

Original	Replacement










Original	Replacement	Original	Replacement
Power On		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec VCR		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
I<<		I<< / Preset-	
>>I		>>I / Preset+	
Power (On /Off)		Eject / Surround	
Direct		D.Menu / Top	
RDS		AV / Input / RDS	
SPKR/Menu		Menu / Home	
Delay/Prev. CH		Exit / Cancel / Clear	
Vol+ VCR		Vol+	
Mem/[≡◆]		Smart / List	
PR+ VCR		CH+ / Page+	

Original	Replacement	Original	Replacement
Vol- VCR		Vol-	
PR- VCR		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Preset ▲/Blue		Blue / Prime Video / Random	
Power Off		Shift + Power	
Play VCR		Shift + Play /	
Stop VCR		Shift + Stop /	
<< VCR		Shift + << /	

Tune-





Original	Replacement
>> VCR	 Shift + >> /
Clear VCR	 Shift + Exit / Cancel / Clear
Tun-M/[≡+]	 Shift + CH + /
1 VCR	 Shift + 1
2 VCR	 Shift + 2
3 VCR	 Shift + 3
4 VCR	 Shift + 4
5 VCR	 Shift + 5
6 VCR	 Shift + 6
7 VCR	 Shift + 7
8 VCR	 Shift + 8
9 VCR	 Shift + 9
0 VCR	 Shift + 0

Original	Replacement





Original	Replacement	Original	Replacement
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<<	 << / Tune-		
>>	 >> / Tune+		
<>	 OK		

