


 
 

 
 


 












 
 

 

 
 
 

 

 



 





 



























 















Original	Replacement
 DAT/TAPE1	 Shift + Red / Netflix /
 TAPE2	 Shift + Green / APP /
 << Deck A	 Down
 << Deck B	 Shift + Down
 < Deck B	 Shift + Left
 < Deck A	 Left
 > Deck B	 Shift + Right
 > Deck A	 Right
 >> Deck B	 Shift + Up
 >> Deck A	 Up
 TAPE3	 Shift + Yellow / YouTube /
 Stop Deck A	 OK
 Stop Deck B	 Shift + OK
 Pause Deck B	 Shift + Pause / Step /
 Deck B Rec	 Shift + Stop /
 Rec Deck A	 Rec / Rec Mode
 Rec Deck B	 Shift + Rec / Rec Mode

Original	Replacement
 AUX	 Yellow / YouTube / Repeat
 Tuner Preset +	 Shift + >>I / Preset+
 Tuner Preset +	 CH+ / Page+
 CD	 Red / Netflix / Search
 Tuner Preset -	 Shift + I<< / Preset-
 Tuner Preset -	 CH- / Page-
 Tuner	 Green / APP / Repeat
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0





Original		Replacement	
	1 CD	 + 	Shift + 1
	2 CD	 + 	Shift + 2
	3 CD	 + 	Shift + 3
	4 CD	 + 	Shift + 4
	5 CD	 + 	Shift + 5
	6 CD	 + 	Shift + 6
	7 CD	 + 	Shift + 7
	8 CD	 + 	Shift + 8
	9 CD	 + 	Shift + 9
	10 CD	 + 	Shift + 0
	CD I<<<		I<<< / Preset-
	CD >>>I		>>>I / Preset+
	CD Play		Play / Slow
	Phono		Blue / Prime Video / Random
	CD Stop		Stop / Hold
	CD Pause		Pause / Step / Freeze
	Attenuator +		Vol+

Original		Replacement	
	Attenuator -		Vol-

