
 


 


















 
 




 






 
 

 



 
 


 

 





 




 


 


















 
 




 







Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Store	 Media
9	 9	Browse	 Smart
Guide -/-- 1.	 Guide	Tune+	 >>
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone+	 3D		
Off/Tim	 +  Shift + Sleep		
Mix Scan	 Format		
Game Coo	 +  Shift + Eject		
Disp	 List		
Search	 +  Shift + TV/R		
Tune-	 <<		
Aft/Caf	 +  Shift + Ok		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	AV 2	 +  Shift + AV
9	 9	Bright+ Mode	 +  Shift + Menu
Guide -/-- 1.	 Guide	Search	 +  Shift + Up
0/10	 0	Tune-	 +  Shift + Left
2.Fav P/C 2.	 Pre Ch	Disp	 List
Red	 Red	Tune+	 +  Shift + Right
Green	 Green	Bright- Sys	 +  Shift + Exit
Yellow	 Yellow	Store	 +  Shift + Down
Blue	 Blue	Input	 +  Shift + Vol +
On/Off	 +  Shift + Power	Contrast+	 +  Shift + Ch +
Rotate Text	 +  Shift + Mute	Output	 +  Shift + Vol -
Tone+	 3D	Contrast-	 +  Shift + Ch -
On/Tim	 +  Shift + Subt	Color- S.Std	 +  Shift + Dual
Off/Tim	 +  Shift + Sleep	On Pip	 +  Shift + 1
Mix Scan	 +  Shift + TV/R	Swap	 +  Shift + 2
Color+ P.Std	 +  Shift + Format	Rotate Pip	 +  Shift + 3
Store Text	 +  Shift + Text	Still	 +  Shift + 4



