


 


 


 
 
 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Recall	 Back
 Display	 Info
 Source	 AV
 Up	 Up

Original	Replacement
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit
 Menu	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 S.Mode	 +  Shift + Dual
 CH+	 Ch +
 CH-	 Ch -
 Audio I/II	 Dual
 P.Mode	 +  Shift + Format
 Auto	 Smart
 Sleep	 Sleep
 Aspect	 Format
 Red / Eject	 Red





Original	Replacement
Red / Eject	Eject
Green / D.Menu	Green
Green / D.Menu	D. Menu
Yellow / Setup	Yellow
Yellow / Setup	Options
Blue / D.Disp	Blue
Blue / D.Disp	List
Play/Pause / Text	Text
Play/Pause / Text	Play
Play/Pause / Text	Pause
Stop / Index	Stop
A-B / MIX	Shift + TV/R
Repeat / Reveal	Shift + Text
<< / Hold	Shift + Stop
<< / Hold	<<
>> / Subpage	>>
>> / Subpage	Shift + Subt

Original	Replacement
I<< / Size	I<<
I<< / Size	Shift + Eject
>>I / Cancel	>>I
>>I / Cancel	Shift + Exit
Time Shift	Media
Rec	Rec
FAV-	Shift + Left
FAV+	Shift + Right
EPG	Guide
FAV	Pre Ch
Subtitle	Subt
TV / Radio	TV/R

