









 





 

 


 



 













Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 [≡]...	 Subtitle / EQ
 Home	 Shift + Menu /
 Home	 D.Menu / Top
 V+	 Vol+
 Mute	 Mute / Dimmer

Original	Replacement
 P+	 CH+ / Page+
 V-	 Vol-
 Source	 AV / Input / RDS
 P-	 CH- / Page-
 [G]	 Guide / EPG / -/-
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 ←	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Menu	 Menu / Home
 *1	 Picture / Format





Original	Replacement	Original	Replacement
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

