


 

 
 





 


 
 






 
 



 




 


 








Original	Replacement	Original	Replacement
	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch
			Info
			Exit
			Up
			Down
			Right
			Left
			Ok
			Ch +
			Ch -
			Vol +
			Vol -
			Red
			Green
			Yellow
			Blue
			Subt
			Dual



 



 





 
 
 

 
 




 




 
 

 







Original	Replacement	Original	Replacement
 TXT	 Text		
Zoom	 Eject		
Play/Pause	 Play		
Stop	 Stop		
I>/Slow	 Pause		
Rec	 Rec		
<<	 <<		
>>	 >>		
I<<	 I<<		
>>I	 >>I		

 





Original	Replacement	Original	Replacement
On/Off	 Power	Chan.Up	 Ch +
Mute	 Mute	Volume-	 Vol -
Update	 Smart	Menu audio	 Dual
Subt.List	 Subt	Chan.Down	 Ch -
Info	 Info	1	 1
Sleep Timer	 Sleep	2	 2
Return TV	 TV/R	3	 3
Text	 Text	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8
Menu Right	 Right	9	 9
Menu Off	 Exit	Guide -/-- 1.	 Guide
Menu Down	 Down	0/10	 0
Back	 Back	Red	 Red
Volume+	 Vol +	Green	 Green





Original	Replacement	Original	Replacement
Yellow	 Yellow		
Blue	 Blue		

