



Original	Replacement	Original	Replacement
	Shift +		
			Shift +





Original	Replacement
Deck <<	Shift + << /
Deck >>	Shift + >> /
Status	Shift + Setup / OPT / Tools
CH Vol Up	Shift + Vol+
CD Disc Skip+	Shift + CH+ /
CH Vol Down	Shift + Vol-
Video Select	Shift + 4
Tuner Shift	Shift + 6

Original	Replacement





Original	Replacement	Original	Replacement
AVR/AVC	AV / Input / RDS	DVD I<<	I<< / Preset-
Power VCR	Power	DVD Pause	Pause / Step / Freeze
Power DVD	Shift + Power	DVD >>I	>>I / Preset+
PHONO	Shift + Sound / Title	DVD Display	Display / Media
CD	3	DVD Stop	Stop / Hold
DVD/VDP	2	DVD Return	Back / Return
TV/DBS	1	DVD Setup	Setup / OPT /
VCR	4	Up	Up
MD / TAPE MON	5	Select	OK
TUNER	9	Master Vol+	Vol+
TUNER	6	Left	Left
Tuner Shift	Shift + 6	Down	Down
Tuner Channel+	CH+ / Page+	Right	Right
Tuner Channel-	CH- / Page-	Master Vol-	Vol-
DVD Title	Sound / Title	T.Tone	Audio / Lang I/II
DVD Play	Play / Slow	Video Select	Shift + 4
DVD Menu / Guide	Menu / Home	Mode	D.Menu / Top








































































	Original	Replacement	Original	Replacement
	 Muting	 Mute / Dimmer		
	 CH Select	 Smart / List		
	 CH Vol Down	 Shift + Vol-		
	 CH Vol Up	 Shift + Vol+		
	 Status	 Shift + Setup / OPT / Tools		





Original	Replacement	Original	Replacement
Muting	 Mute / Dimmer	Deck >	 Right
MD Play	 Play / Slow	Menu Down	 Down
MD Pause	 Pause / Step / Freeze	Master Vol+	 Vol+
Deck Stop	 Stop / Hold	CH Select	 Smart / List
Deck <<	 << / Tune-	Tuner Channel+	 CH+ / Page+
Deck >>	 >> / Tune+	Master Vol-	 Vol-
MD I<<	 I<< / Preset-	Tuner Channel-	 CH- / Page-
MD >>I	 >>I / Preset+	TV/DBS	 1
T.Tone	 Sound / Title	DVD/VDP	 2
PHONO	 Audio / Lang I/II	CD	 3
Surround	 Eject / Surround	VCR	 4
Mode	 D.Menu / Top	MD / TAPE MON	 5
System Setup	 Setup / OPT /	TUNER	 6
AVR/AVC	 AV / Input / RDS	TUNER	 9
Menu Next	 Menu / Home	Deck A/B	 Yellow / YouTube / Repeat
Menu Up	 Up	MD Stop	 Shift + Stop /
Deck <	 Left	MD <<	 Shift + << /

Original	Replacement	Original	Replacement
Deck >	 Right	Deck >	 Right
Menu Down	 Down	Menu Down	 Down
Master Vol+	 Vol+	Master Vol+	 Vol+
CH Select	 Smart / List	CH Select	 Smart / List
Tuner Channel+	 CH+ / Page+	Tuner Channel+	 CH+ / Page+
Master Vol-	 Vol-	Master Vol-	 Vol-
Tuner Channel-	 CH- / Page-	Tuner Channel-	 CH- / Page-
TV/DBS	 1	TV/DBS	 1
DVD/VDP	 2	DVD/VDP	 2
CD	 3	CD	 3
VCR	 4	VCR	 4
MD / TAPE MON	 5	MD / TAPE MON	 5
TUNER	 6	TUNER	 6
TUNER	 9	TUNER	 9
Deck A/B	 Yellow / YouTube / Repeat	Deck A/B	 Yellow / YouTube / Repeat
MD Stop	 Shift + Stop /	MD Stop	 Shift + Stop /
MD <<	 Shift + << /	MD <<	 Shift + << /

Tune-



