

 
 
 

 
 
 









 
 

 
 

 

 
 
 

 
 

 
 

 
 


 

 
 



 


 


 


 
 
 



 









Original	Replacement	Original	Replacement
 Power	 Power	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 <<	 <<
 Eject/Open-Close	 Eject	 Stop	 Stop
 VCR	 Smart	 Play	 Play
 DVD	 Media	 Pause/Step	 Pause
 3	 3	 Disc Menu/List	 Menu
 4	 4	 Home	 Shift + Smart
 5	 5	 Display	 Info
 6	 6	 Return	 Back
 7	 7	 Enter	 Ok
 8	 8	 Up	 Up
 9	 9	 PR/CH/TRK+	 Ch +
 0	 0	 PR/CH/TRK-	 Ch -
 Clear	 Exit	 Down	 Down
 AV/Input	 AV	 Right	 Right
 >>	 >>	 Left	 Left





Original	Replacement
O))/Audio	Dual
[...]/Subtitle	Subt
Zoom	Shift + Eject
I.Skip	3D
Rec	Rec
TV/VCR	TV/R
CHP.ADD	Text
Title	Options
Rec Mode	Shift + Rec
Dubbing	Mute
Play Mode	Shift + Play
Marker	Pre Ch
Search	Shift + TV/R
Thumbnail	List
Power Tv	Shift + Power
AV/Input Tv	Shift + AV
Vol+ Tv	Vol +

Original	Replacement
Vol- Tv	Vol -
PR/CH+ Tv	Shift + Ch +
PR/CH- Tv	Shift + Ch -

