






 
Original	Replacement
Power	Power
ShowView	3D
AV	AV
Direct Tv Rec	TV/R
Rec	Rec
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Cancel	Exit

Original	Replacement
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
HDD	Media
DVD	Smart
<< Slow/Search	<<
Slow/Search >>	>>
Stop	Stop
Pause	Pause
Play	Play
Top Menu / Direct Navigator	D. Menu
Menu / Play List	Menu
Up	Up
Left	Left
Enter	Ok
Right	Right





Original	Replacement
 Down	 Down
 Functions	 Options
 Return	 Back
 Prog/Check	 Sleep
 Timer	 Shift + AV
 Display	 Info
 Time Slip	 Text
 Dubbing	 Subt
 Rec Mode	 Shift + Rec
 I<< Skip	 I<<
 Skip >>I	 >>I
 A/Input Select	 Eject
 B/Status	 List
 C/AV Link	 Yellow
 D/Manual Skip	 Format
 Erase	 Dual
 Audio	 Shift + Dual

Original	Replacement
 Position	 Green
 Marker	 Pre Ch





	Original	Replacement		Original	Replacement
TV	Power	Power	MANUAL SKIP	D	Blue
CH+	CH+	Ch +			
CH-	CH-	Ch -			
1	1	1			
2	2	2			
3	3	3			
4	4	4			
5	5	5			
6	6	6			
7	7	7			
8	8	8			
9	9	9			
0	0	0			
-/--	-/--	Guide			
INPUT SELECT	A	Red			
STATUS	B	Green			
AV LINK	C	Yellow			

