


 







 

 




 

 






 
 
 


 



 

 

 



 



 



 



 



 










Original	Replacement	Original	Replacement
 Power	 Power	 0/I.Skip	 0
 USB	 Media	 Bookmark	 Guide
 Power Tv	 Shift + Power	 Step	 Options
 Video Sel	 Smart	 <<	 <<
 HDMI Sel	 AV	 I.Replay	 3D
 Repeat	 Text	 Pause	 Pause
 A-B Repeat	 Shift + Text	 >>	 >>
 Open/Close	 Eject	 I<<	 I<<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 >>I	 >>I
 4	 4	 Tv Vol+	 Vol +
 5	 5	 Tv Vol-	 Vol -
 6	 6	 Tv/Video	 TV/R
 7	 7	 Tv CH+	 Ch +
 8	 8	 Tv CH-	 Ch -
 9	 9	 Menu	 Menu



