 


 







 

 


 
 

 


 








 


 
 
 







 





 

 
 
 
 





 
 




 
 





 

 
 


 
 
 
 

 

 

 
 




	Original	Replacement		Original	Replacement
	Power		Power		0
	Mute		Mute		Setup
	Function		Smart		Display
	Input		AV		Up / Preset+
	Sleep		Sleep		Down / Preset-
	Return		Back		Right / Tun+
	EQ		Red		Left / Tun-
	VSM		Green		Enter
	1		1		Menu
	2		2		Title
	3		3		<< / Scan-
	4		4		>> / Scan+
	5		5		Play
	6		6		I<< / Skip-
	7		7		>>I / Skip+
	8		8		Pause / Step
	9		9		Prog. Memo.
					Options
					Info
					Up
					Down
					Right
					Left
					Ok
					Menu
					3D
					<<
					>>
					Play
					I<<
					>>I
					Pause
					TV/R





Original	Replacement	Original	Replacement
 Rec	 Rec		
 Stop	 Stop		
 Volume+	 Vol +		
 Volume-	 Vol -		
 Repeat	 Text		
 S-Title	 Subt		
 RDS	 Yellow		
 PTY	 Blue		
 HT SPK	 Dual		
 Clear	 Exit		
 TV Power	 Shift + Power		
 TV Input	 Shift + AV		
 TV Prog+	 Shift + Ch +		
 TV Prog-	 Shift + Ch -		
 TV Vol+	 Shift + Vol +		
 TV Vol-	 Shift + Vol -		

