




 

 







 







 

 



 







 



 



 

















 
 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		Menu / Sel		Menu
	Mute		Mute		Menu / Sel		Ok
	TV / Video		TV/R		Exit		Exit
	V.Size		Eject		Up / PG+		Up
	PIP		Smart		Up / PG+		Ch +
	1		1		Down / PG-		Down
	2		2		Down / PG-		Ch -
	3		3		Right / Vol+		Right
	4		4		Right / Vol+		Vol +
	5		5		Left / Vol-		Left
	6		6		Left / Vol-		Vol -
	7		7		MTS		Media
	8		8		PG Info		Info
	9		9		Still		Pause
	0		0		Picture		Format
	Text		Text		Sound		Dual
	Pre Pg		Pre Ch		Sleep		Sleep





	Original	Replacement		Original	Replacement
	Bright	 Options			
	Red / Erase	 Red			
	Time	 AV			
	Green / Skip	 Green			
	Yellow / Insert	 Yellow			
	Blue / Replace	 Blue			

	Original	Replacement		Original	Replacement

