

 

 

 


 


 






 
 



 




 
 

 
 

 





 
 


 




Original		Replacement		Original		Replacement	
	Function		Power		Right		Right
	Language		Dual		Left		Left
	Screen On/Off		Smart		OK		Ok
	Setup		Options		Play		Play
	Vol+		Vol +		Pause		Pause
	Vol-		Vol -		1		1
	Mute		Mute		2		2
	Info/Display		Info		3		3
	Stop/USB/Card		Stop		4		4
	DVD Menu		D. Menu		5		5
	Title		List		6		6
	Tv/Radio		TV/R		7		7
	TTX		Text		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG/Program/Angl		Guide
	Down		Down		Zoom/Slow		3D





	Original	Replacement		Original	Replacement
	<<		<<		
	I<<		I<<		
	>>I		>>I		
	>>		>>		
	Subtitle		Subt		
	Audio	+	Shift + Dual		
	Search	+	Shift + TV/R		
	FAV/Repeat		Pre Ch		

	Original	Replacement		Original	Replacement

