



 








 
 
 






 



 

 

 





 











 





 

















Original	Replacement
	 Power
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Stop / Hold
	 Play / Slow
	 >> / Tune+
	 << / Tune-
	 Guide / EPG / -/--
	 Shift + 3
	 Smart / List
	 Menu / Home
	 Display / Media
	 Picture / Format
	 TV/Radio /
	 OK
	 Up
	 Down

Original	Replacement
	 Right
	 Left
	 Info / Angle
	 Exit / Cancel / Clear
	 Back / Return
	 Shift + Smart / List
	 Setup / OPT /
	 Mute / Dimmer
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 1





	Original	Replacement		Original	Replacement
		2		2	
		3		3	
		4		4	
		5		5	
		6		6	
		7		7	
		8		8	
		9		9	
		0		0	
		Subtitle		Subtitle / EQ	
		Text		Text / Goto	
		Source		AV / Input / RDS	

