














 



 







 



 

 

 



 

 





 





 

 



 




 







Original	Replacement	Original	Replacement
 Power	 Power	 Yellow / FAV	 Pre Ch
 Mute	 Mute	 Blue / SLP	 Blue
 Up / CH+	 Up	 Zoom	 Eject
 Up / CH+	 Ch +	 Freeze	 Pause
 Left / Vol-	 Left	 Blue / SLP	 Sleep
 Left / Vol-	 Vol -	 DSP / CAPS	 Info
 Right / Vol+	 Right	 Recall	 Back
 Right / Vol+	 Vol +	 1	 1
 Down / CH-	 Ch -	 2	 2
 Down / CH-	 Down	 3	 3
 Enter	 Ok	 4	 4
 Menu	 Menu	 5	 5
 Red / P.M	 Red	 6	 6
 Red / P.M	 Format	 7	 7
 Green / S.M	 Green	 8	 8
 Green / S.M	 Shift + Dual	 9	 9
 Yellow / FAV	 Yellow	 0	 0





Original	Replacement	Original	Replacement
	-/--		Guide
	Input		AV
	PIP		Smart
	POP		Media
	PIP-POS		Shift + Smart
	M.Win		TV/R
	Active-Win		Shift + TV/R
	Timer		Shift + AV
	Stereo		Dual
	Swap		Exit
	Text		Text
	Text Mix		Shift + Text
	Text Hold		Stop
	Text Update		Options
	Text Reveal		Subt
	Text Size		Shift + Eject

Original	Replacement

