
 










 




 

 



 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Audio		Dual
	Sleep		Sleep
	Format		Format
	Source		AV
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / CH List		Ok
	Left / Vol+		Vol +
	Right / Vol+		Right
	Down / CH-		Ch -
	Down / CH-		Down

Original	Replacement	Original	Replacement
	EPG		Guide
	i		Info
	OK / CH List		List
	Rec		Rec
	PVR		Smart
	P- / Pause		Shift + Ch -
	P+ / →I		Shift + Ch +
	Stop		Stop
	Play		Play
	Pause / Time Shift		Pause
	Time Shift		Shift + Pause
	Red / << /		Red
	Red / << /		<<
	Red / << /		TV/R
	Green / >> / Fav		Green
	Green / >> / Fav		>>
	Green / >> / Fav		Pre Ch





Original	Replacement
Yellow / SAT / <II	Yellow
Yellow / SAT / <II	Media
Blue / II> / +/-	Blue
I<<	I<<
>>I	>>I
Repeat T1/T2	Shift + Text
White / A-B	3D
Subtitle	Subt
Text	Text
Dual screen	Options
Zoom	Eject
1*?	1
2	2
3	3
4	4
5	5
6	6

Original	Replacement
7	7
8	8
9	9
0	0
?	D. Menu
Recall	Back

