


 









 
 

 




 


 
 













 

 
 
 


 

 
 




 
 





 

 



 



 




 






Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	Mute		Mute		P+		Ch +
	1		1		Down		Down
	2		2		P-		Ch -
	3		3		Right		Right
	4		4		Left		Left
	5		5		M		Ok
	6		6		Vol+		Vol +
	7		7		Vol-		Vol -
	8		8		Red/Sound		Red
	9		9		Green/Picture		Green
	0		0		Yellow/Feature		Yellow
	PP		Back		Blue/Install		Blue
	P<P		Pre Ch		TV		TV/R
	--		Guide		AV		AV
	Info		Info		[≡]		Text
	I-II		Dual		[/≡]		3D





Original	Replacement	Original	Replacement
 [≡o]	 Media		
 [≡+]	 Subt		
 [≡x]	 Exit		
 [≡◇]	 Format		
 [≡?]	 Options		
 [≡i]	 Menu		

