




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		*		Smart / List
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	EPG		Guide / EPG / -/--		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix / Search
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube / Repeat
	Vol+		Vol+		prime video		Shift + Blue / Prime / Random
	Source		AV / Input / RDS		USB		Shift + 8
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>>	 >>> / Tune+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Audio	 Audio / Lang I/II		

