












 












 


 



 




 

 

 
 






 

 


 
 
 





 

 







Original	Replacement	Original	Replacement
On/Off	 Power	Menu Left	 Left
Top Menu	 +  Shift + Menu	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Exit
Auto/Track	 Red	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Pause	 Pause	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Next	 >>
Title	 List	Volume-	 Vol -
Repeat/1/All	 Text	1	 1
Stop	 Stop	Prev.	  <<
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	Digest	 Blue
Display	 Info	5	 5



Original	Replacement	Original	Replacement
Record	 Rec		
6	 6		
7	 7		
Pbc	 Yellow		
R/L	 Green		
8	 8		
Resume	 +  Shift + Play		
9	 9		
Karaoke/Step	 +  Shift + Pause		
F.Forward	 >>		
Play/Back	 Smart		
Open/Close	 Eject		
Audio	 +  Shift + Dual		
+10	 Guide		
Timer	 Sleep		
Play	 Play		
Rewind	 <<		

Original	Replacement	Original	Replacement
0	 0		
Setup	 Options		
C/CH	 Pre Ch		
Input Source	 +  Shift + AV		
Echo+	 +  Shift + Ch +		
Echo-	 +  Shift + Ch -		
Info	 +  Shift + Info		
Angle	 Format		
Lang	 Dual		
Shuffle	 TV/R		
Random	 +  Shift + TV/R		

