
 
 



 
 
 

 

 



 


 



 


 

 


 


 


 
 



 

 
 
 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
I<<	 I<<	Menu Down	 Down
>>I	 >>I	Back	 Back
Stop	 Stop	Volume+	 Vol +
Tone+	 Dual	Chan.Up	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9



Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide	Level R/Woofer	 Blue
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
<<	 <<		
Tone-	 List		
Rec	 Rec		
>>	 >>		
Play	 Play		
Audio+	 Options		
Mix Scan	 Smart		
On/Off	 +  Shift + Power		
Pause	 Pause		
AV 2	 +  Shift + AV		
3.*	 +  Shift + Guide		
Surround	 Red		
Nicam/Mono	 Green		
Level L	 Yellow		

