

 
 
 

 
 






 
 
 
 


 

 

 


 



 

 


 


 
 

 


 

 
 


 

 

 
 

 

 
 

 




 
 
 
 


 
 


 




 



 
 


 

 

 
 











Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv/AV	 AV	 Sound	 Dual
 Mute	 Mute	 Picture	 Format
 Timer	 Shift + AV	 ▼ A-B	 Options
 [.] / [≡?]	 3D	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [≡♦]/Bass	 Subt
 0	 0	 TXT/TV	 Text
 -./-/[≡o]	 GUIDE	 S.SYS	 Smart
 P↔P/[≡+]	 PRE-CH	 Surround	 List

Original	Replacement	Original	Replacement
 Menu	 Menu	 Sound	 Dual
 Picture	 Format	 ▼ A-B	 Options
 CH+	 Ch +	 CH-	 Ch -
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 OK	 Ok	 Vol+	 Vol +
 Vol+	 Vol +	 Vol-	 Vol -
 [≡♦]/Bass	 Subt	 TXT/TV	 Text
 S.SYS	 Smart	 Surround	 List





Original		Replacement		Original	Replacement
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

