 
 




 
 







Original	Replacement	Original	Replacement
 Power	 Power	 S.A. Bass	 Options
 FM	 Smart	 Tape A	 Red
 AM	 Media	 Tape B	 Green
 1	 1	 Direction	 Pre Ch
 2	 2	 Repeat	 Text
 3	 3	 Pause	 Pause
 4	 4	 CD Control	 Yellow
 5	 5	 Play CD	 Play
 6	 6	 Stop CD	 Stop
 7	 7	 Rec Pause	 Rec
 8	 8	 Volume+	 Vol +
 9	 9	 Volume-	 Vol -
 10	 0	 I<< CD	 I<<
 +10	 Guide	 << CD	 <<
 Sleep	 Sleep	 >>I CD	 >>I
 Sound Mode	 Dual	 >> CD	 >>
 FM Mode	 TV/R	 Play Tape	 Shift + Play





Original		Replacement		Original		Replacement	
	Stop Tape	 + 	Shift + Stop		2 CD	 + 	Shift + 2
	Tape Control		Blue		3 CD	 + 	Shift + 3
	AUX		AV		4 CD	 + 	Shift + 4
	>> Tape	 + 	Shift + >>		5 CD	 + 	Shift + 5
	<< Tape	 + 	Shift + <<		6 CD	 + 	Shift + 6
	Disc 1		Subt		7 CD	 + 	Shift + 7
	Disc 2		Format		8 CD	 + 	Shift + 8
	Disc 3		Eject		9 CD	 + 	Shift + 9
	PTY/EON		Menu		10 CD	 + 	Shift + 0
	Display Mode		Info		+10 CD	 + 	Shift + Guide
	Select-		Ch -				
	Select+		Ch +				
	>> Tuning		Up				
	<< Tuning		Down				
	l<< Tuning		Left				
	>>l Tuning		Right				
	1 CD	 + 	Shift + 1				

