













 







 











 







 







 



 



 



 
 








Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		HDMI		Shift + 0
	1		1		P-		CH- / Page-
	2		2		Media		Shift + Display / Media
	3		3		P.Mode		Picture / Format
	4		4		Home		Shift + Menu /
	5		5		S.Mode		Sound / Title
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Source		AV / Input / RDS
	9		9		Left		Left
	Lang		Audio / Lang I/II		Enter		OK
	0		0		Right		Right
	Recall		Back / Return		Display		Display / Media
	Vol+		Vol+		Down		Down
	*/Setting		Setup / OPT /		Exit		Exit / Cancel / Clear
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original	Replacement
	Green / APP / Repeat
	Sub.T / EQ
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	<< / Preset-
	>> / Preset+
	Rec / Rec Mode

Original	Replacement

