 

 


 

 
 

 
 
 

 
 
 
 
 
 
 
 
 
 


 
 


 
 
 
 




 









Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Search	 TV/R
 Prog/Direct	 Sleep
 Clear	 Exit
 Call	 Pre Ch

Original	Replacement
 Dimmer	 Shift + Info
 YouTube	 Media
 Netflix	 Shift + Smart
 Vidu	 Shift + Media
 Info	 Info
 Home	 Smart
 Power AMP	 Shift + Power
 Source Up	 Ch +
 Source Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up Menu	 D. Menu
 Return	 Back
 Setup	 Shift + Options
 Up	 Up





Original		Replacement		Original		Replacement	
	Down		Down		Audio		Dual
	Right		Right		Option		Options
	Left		Left		Red		Red
	Enter		Ok		Green		Green
	<<		<<		Yellow		Yellow
	Play		Play		Blue		Blue
	>>		>>		Video Resolution		3D
	I<<		I<<		DVD a Page		Shift + AV
	Pause		Pause		Disc Layer		Shift + Format
	Stop		Stop		Picture Adjust		Shift + 3D
	>>I		>>I				
	Repeat		Text				
	A-B		Shift + Back				
	Random		AV				
	Pure		Format				
	Subtitle		Subt				
	Angle		List				

