
 








 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 HDMI	 Media	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 Menu	 Menu
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Mute	 Mute	 Red	 Red
 CH List	 List	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Dual I-II		Dual				
	Content		D. Menu				
	3D		3D				
	Alarm		TV/R				
	P.Size		Format				
	Subt.		Subt				
	Enter		Ok				
	<</ <<		<<				
	Pause		Pause				
	>>/>>		>>				
	Play		Play				
	Rec		Rec				
	Stop		Stop				

