



Original	Replacement
	Power
	TV/R
	AV
	Dual
	Shift + 1
	Shift + 2
	Shift + 3
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Replacement
	Blue
	I<<
	Yellow
	>>I
	Smart
	Green
	Play
	Red
	Stop
	Vol +
	Vol -
	Ch +
	Up
	Down
	Ch -
	Right
	Left





	Original	Replacement	Original	Replacement
	OK	Ok		
	Info	Info		
	Pause	Pause		
	Text	Text		
	Mute	Mute		
	Menu	Menu		
	EPG	Guide		

