



Original	Replacement	Original	Replacement
Power Receiver	Power	Mute	Mute / Dimmer
BD	1	Top Menu	D.Menu / Top
DVD	2	Band	Subtitle / EQ
DVR / BDR	5	Audio	Audio / Lang I/II
HDMI	0	Tune+	Shift + >> /
TV	TV/Radio /	Up	Up
CD	3	Tools	Setup / OPT /
NET	7	T.Edit	Text / Goto
ADAPTER	Eject / Surround	Video	Picture / Format
iPod USB	8	Left	Left
Tuner	6	Preset -	Shift + I<< / Preset-
Video	4	Enter	OK
CD-R	9	Preset +	Shift + >>I / Preset+
Input Select	Shift + Left	Right	Right
Input Select ~	Shift + Right	iPod CTRL	Smart / List
Master Volume	Vol+	Home Menu	Menu / Home
Master Volume	Vol-	Tune-	Shift + << /

Tune-





Original		Replacement		Original		Replacement	
	Down		Down		Stop		Stop / Hold
	Return		Back / Return		>>I		>>I / Preset+
	Auto / Alc / Direct		Info / Angle		1 Tuner		Shift + 1
	Stereo		Sound / Title		2 Tuner		Shift + 2
	Repeat		Green / APP / Repeat		3 Tuner		Shift + 3
	Standard		Shift + Smart / List		Audio DVD		Shift + Audio / Lang I/II
	Random		Blue / Prime Video / Random		4 Tuner		Shift + 4
	Adv. Surr.		Guide / EPG / -/-		Signal Sel		Shift + Setup / OPT / Tools
	<<		<< / Tune-		MCACC		Fav / Marker / PC
	Phase CTRL		Red / Netflix / Search		5 Tuner		Shift + 5
	Play		Play / Slow		6 Tuner		Shift + 6
	>>		>> / Tune+		Sleep		Sleep / Timer
	Status		Exit / Cancel / Clear		Disp		Display / Media
	I<<		I<< / Preset-		7 Tuner		Shift + 7
	Pause		Pause / Step / Freeze		CH Level		Shift + CH+ /
	MPX		Zoom / Size		8 Tuner		Shift + 8
	PQLS		Shift + Menu / Home		A.ATT.		Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
9 Tuner	Shift + 9		
Dimmer	Shift + Mute / Dimmer		
CH +	CH+ / Page+		
D.Access	Shift + D.Menu / Top Menu		
0 Tuner	Shift + 0		
Class	Shift + Display / Media		
Enter (Class)	Shift + OK		
CH -	CH- / Page-		





Original		Replacement		Original		Replacement	
	Power Source		Power		1		1
	DVD		Shift + 2		2		2
	Top Menu		D.Menu / Top		3		3
	Up		Up		Audio		Audio / Lang I/II
	Left		Left		4		4
	Enter		Shift + OK		5		5
	Enter		OK		6		6
	Right		Right		7		7
	Down		Down		8		8
	Return		Back / Return		9		9
	<<		<< / Tune-		0		0
	Play		Play / Slow		Menu		Menu / Home
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				





Original	Replacement	Original	Replacement
Power Source	Power	1	1
Tuner	Shift + 6	2	2
Master Volume	Vol+	3	3
Master Volume	Vol-	4	4
Mute	Mute / Dimmer	5	5
Band	Subtitle / EQ	6	6
Tune+	>> / Tune+	Disp	Display / Media
Tune+	Up	7	7
T.Edit	Text / Goto	8	8
Preset+	>> / Preset+	9	9
Preset-	Left	D.Access	D.Menu / Top
Enter	OK	0	0
Preset-	<< / Preset-	Class	Shift + Display / Media
Preset+	Right	Menu	Menu / Home
Tune-	<< / Tune-	Search	Red / Netflix / Search
Tune-	Down		
MPX	Zoom / Size		

