 


 



 










 



 



 



 






 


 
 


 
 


 

 
 



 
 

 

 

 



 

















Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play
 Eco	 3D	 Pause	 Pause
 CH/Page+	 Ch +	 Stop	 Stop
 CH/Page-	 Ch -	 Home	 Smart
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 I<</Tune-	 I<<
 Volume+	 Vol +	 >>	 >>
 Volume-	 Vol -	 <<	 <<
 Info	 Info	 Green/Movie	 Green
 Option	 Options	 Red/Music	 Red
 Setup	 Menu	 Blue/Game	 Blue
 Back	 Back	 Yellow/Pure	 Yellow
 Up	 Up	 1	 1
 Enter	 Ok	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5



 

 
 








 

 

 

 

 
 

 
 
 
 




 


 
 


 

 

 

 
 





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format
	TV Audio		TV/R
	Smart Select 4		D. Menu
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7

Original	Replacement	Original	Replacement
	Phono		Shift + 9
	AUX2		Shift + 8
	iPod / USB		Guide
	Internet Radio		Pre Ch
	Media Player		Shift + Guide
	CD		Shift + 0
	Online Music		Shift + Pre Ch

 





 
 
 
 

 





 


 


 


 





 

 





Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >> /Tune+	 >>
 Sleep	 Sleep	 <</Tune-	 <<
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format











 

 

 











 
 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 >> /Tune+	 >>
 CH/Page+	 Ch +	 <</Tune-	 <<
 CH/Page-	 Ch -	 <<	 <<
 Sleep	 Sleep	 >>	 >>
 Mute	 Mute	 1	 1
 Volume+	 Vol +	 2	 2
 Volume-	 Vol -	 3	 3
 Back	 Back	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Smart Select 1	 Text
 Pause	 Pause	 Smart Select 2	 AV
 Play	 Play	 Smart Select 3	 Format





Original		Replacement		Original	Replacement
	Smart Select 4		3D		
	TV Audio		TV/R		
	Media Player		Shift + Guide		
	Internet Radio		Pre Ch		
	CBL/SAT		Shift + 1		
	DVD		Shift + 2		
	Blu-ray		Shift + 3		
	AUX1		Shift + 4		
	Tuner		Shift + 5		
	Bluetooth		Shift + 6		
	Game		Shift + 7		
	AUX2		Shift + 8		
	Phono		Shift + 9		
	iPod / USB		Guide		
	CD		Shift + 0		
	Online Music		Shift + Pre Ch		

