






 

 

 
 


 

 





 
 



 




 



 



 




 
 

 


 


 
 
 

 






 
 





 

 
 
 
 



 
 

 

 
 
 
 






 






Original	Replacement	Original	Replacement
 Power	 Power	 Blue	 Blue
 Open/Close	 Eject	 Audio	 Dual
 Pop-Up Menu	 Menu	 Subtitle	 Subt
 Home	 Smart	 Angle	 Guide
 Top Menu/Title	 Media	 PinP	 Format
 Display	 Info	 Repeat	 Text
 Function	 Options	 Off	 D. Menu
 Return	 Back	 Page Up	 Ch +
 Exit	 Exit	 Page Down	 Ch -
 Up	 Up	 Light	 List
 Down	 Down	 Reset	 Pre Ch
 Right	 Right	 Key	 Sleep
 Left	 Left	 Play	 Play
 Red	 Red	 <<	 <<
 Enter	 Ok	 3D	 3D
 Green	 Green	 >>	 >>
Yellow	Yellow	I<<	I<<





Original		Replacement		Original		Replacement	
	Pause		Pause		8		8
	>>I		>>I		7		7
	Replay		Shift + Play		0		0
	Stop		Stop		9		9
	Skip Search		TV/R		Enter		Shift + Ok
	Power Tv		Shift + Power		Clear		Shift + Exit
	Input Tv		Shift + AV				
	CH+ Tv		Shift + Ch +				
	CH- Tv		Shift + Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

