

 
 


 






 
 




 
 
 
 



 






 

 
 


 


 
 














 
 

 









Original	Replacement	Original	Replacement
On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Reveal	 Smart	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Txt Stop	 Stop	Volume-	 Vol -
Info	 Shift + Info	Chan.Down	 Ch -
Sleep Timer	 Sleep	Menu audio	 Dual
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide

 
 






Original	Replacement	Original	Replacement
0/10	 0		
2.Fav P/C 2.	 PRE-CH		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone+	 MEDIA		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
On/Off	 + 	Shift + Power
Rotate Text	 + 	Shift + Mute
Audio-	 + 	Shift + Vol -
On/Tim		Rec
Off/Tim	 + 	Shift + Rec
Tone+		>>
Color+ P.Std	 + 	Shift + Format
Tone-		<<

Original	Replacement	
Audio+	 + 	Shift + Vol +
Bright+ Mode		>>>
Mix Scan	 + 	Shift + TV/R
Store Text	 + 	Shift + Text
Game Coo	 + 	Shift + Eject
AV 2	 + 	Shift + AV
Disp		3D
Search	 + 	Shift + Up
Store	 + 	Shift + Smart
Browse		Smart
Bright- Sys		l<<<
Output	 + 	Shift + Media
Input		Media
Tune-	 + 	Shift + Left
Aft/Caf	 + 	Shift + Ok
Tune+	 + 	Shift + Right
Color- S.Std	 + 	Shift + Dual



