

 




 



 
 
 


 
 





 
 

 





 



 

 


 
 



 

 
 
 

 

 

 
 
 





 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Classical	 1
 Standby	 +  Shift + Power	 Live/Club	 2
 Volume+	 Vol +	 Entertain	 3
 Volume-	 Vol -	 Movie	 4
 Mute	 Mute	 Stereo	 5
 Up / Preset/CH+	 Up	 Enhancer	 6
 Down / Preset/CH-	 Down	 Sur.Decode	 7
 Right /	 Right	 Parameter	 8
 Left / A/B/C/D/E-	 Left	 Multi CH In	 9
 Menu/Set Menu/Srch Mode	 Menu	 0	 0
 Enter	 Ok	 Sleep	 Pre Ch
 Return/Memory	 Back	 <</Info	 <<
 Title/Level/Band	 TV/R	 >>/Eon	 >>
 Display	 Info	 I<</Mode PTY	 I<<
 Audio	 Dual	 >>I/PTY Seek	 >>I
 Pure Direct	 Smart	 Scene 1	 Red
 Straight	 Media	 Scene 2	 Green





Original	Replacement
Scene 3	Yellow
Scene 4	Blue
Tuner	Shift + 1
C	Shift + Yellow
V-AUX/Dock	Shift + 3
DTV/CBL	Shift + 4
CD	Shift + 5
MD/CD-R	Shift + 6
DVD	Shift + 7
DVR	Shift + 8
VCR	Shift + 9
Phono	Shift + Pre Ch

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		5		5
	Volume+		Vol +		6		6
	Volume-		Vol -		7		7
	Mute		Mute		8		8
	Band		TV/R		9		9
	Search Mode		AV		0		0
	Memory		Back		ENT		Pre Ch
	Preset Up		Up		Info		Red
	Preset Down		Down		PTY Seek Start		Blue
	Right A/B/C/D/E		Right		Eon		Green
	Left A/B/C/D/E		Left		Mode PTY Seek		Yellow
	Enter		Ok		Power		Shift + Power
	Display		Info		Up V-AUX/Dock		Shift + Up
	1		1		Down		Shift + Down
	2		2		Right V-AUX/Dock		Shift + Right
	3		3		Left		Shift + Left
	4		4		Enter V-AUX/Dock		Shift + Ok





Original	Replacement
Audio V-AUX/Dock	Dual
Display	Shift + Info
Return	Shift + Back
Menu	Menu
Title V-AUX/Dock	Shift + TV/R
1 V-AUX/Dock	Shift + 1
2 V-AUX/Dock	Shift + 2
3 V-AUX/Dock	Shift + 3
4 V-AUX/Dock	Shift + 4
5 V-AUX/Dock	Shift + 5
6 V-AUX/Dock	Shift + 6
7 V-AUX/Dock	Shift + 7
8 V-AUX/Dock	Shift + 8
9 V-AUX/Dock	Shift + 9
0 V-AUX/Dock	Shift + 0
+10	Shift + Guide
ENT	Shift + Pre Ch





Original	Replacement
<< V-AUX/Dock	<<
<<	<<
>>	>>
>> V-AUX/Dock	>>
Rec V-AUX/Dock	Rec
Stop	Stop
Pause	Pause
Play	Play



V-AUX/Dock



Original	Replacement
 Power	 Power
 Standby	 +  Shift + Power
 Tuner	 1
 C	 Yellow
 V-AUX/Dock	 3
 DTV/CBL	 4
 CD	 5
 MD/CD-R	 6
 DVD	 7
 DVR	 8
 VCR	 9
 Phono	 Pre Ch
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 <</Info	 <<
 >>/Eon	 >>

Original	Replacement
 I<</Mode PTY	 I<<
 >>I/PTYSeek	 >>I





Original	Replacement
Power	Power
Standby	+ Shift + Power
Tuner	1
C	Yellow
V-AUX/Dock	3
DTV/CBL	4
CD	5
DVD	7
DVR	8
VCR	9
Phono	Pre Ch
Volume+	Vol +
Volume-	Vol -
Mute	Mute
<</Info	<<
>>/Eon	>>
I<</Mode PTY	I<<

Original	Replacement
>>I/PTY Seek	>>I



Seek