

 

 











 

 














 
 
 




Original	Replacement
 Power	 Power
 Audio / Mute	 Audio / Lang I/II
 Audio / Mute	 Mute / Dimmer
 Tv/VCR	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Timer	 AV / Input / RDS
 X	 Setup / OPT /
 0	 0
" button" data-bbox="228 861 261 901"/> "/"	 Display / Media

Original	Replacement
 Up / TV PR+	 Up
 Up / TV PR+	 CH+ / Page+
 Left / TV Vol-	 Left
 Left / TV Vol-	 Vol-
 Right / TV Vol+	 Right
 Right / TV Vol+	 Vol+
 Down / TV PR-	 Down
 Down / TV PR-	 CH- / Page-





Original	Replacement
Power	Power
Audio / Mute	Audio / Lang I/II
Audio / Mute	Mute / Dimmer
Tv/VCR	Guide / EPG / -/--
Tv/VCR	Zoom / Size
1	1
2	2
3	3
30Sec >>	>>I / Preset+
4	4
5	5
6	6
7	7
8	8
9	9
Timer	AV / Input / RDS
X	Setup / OPT /

Original	Replacement
0	0
'/'	Display / Media
Menu	Menu / Home
Prog	Picture / Format
Timer/?	Red / Netflix / Search
OK	OK
Start Debut+	Yellow / YouTube / Repeat
Stop Fin+	Vol+
Date+	CH+ / Page+
Start Debut-	Blue / Prime Video / Random
Stop Fin-	Vol-
Date-	CH- / Page-
<<	>> / Tune+
Play	Play / Slow
>>	I<< / Preset-
Rec	Rec / Rec Mode
Stop	Stop / Hold


 






















 
















Original	Replacement	Original	Replacement
 Pause	 Pause / Step / Freeze		
 Up/Tv Prog+	 Up		
 Left	 Left		
 Right	 Right		
 Down/Tv Prog-	 Down		





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 "	 Display / Media
 Up / PR+	 Up
 Up / PR+	 CH+ / Page+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Right / Vol+	 Right

Original	Replacement
 Right / Vol+	 Vol+
 Down / PR-	 Down
 Down / PR-	 CH- / Page-

