







 
 
 
 


 






Original	Replacement
 Audio	 Audio / Lang I/II
 [ ]	 Picture / Format
 Power	 Power
 PIP	 Zoom / Size
 V=	 D.Menu / Top
 [≡   ]	 Guide / EPG / -/--
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Pause/T	 Pause / Step / Freeze
 M	 Menu / Home
 E	 Exit / Cancel / Clear
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red	 Red / Netflix / Search
 Blue	 Blue / Prime Video / Random
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat



 

























 



















 




 



 


Original	Replacement
 Audio	 Audio / Lang I/II
 [ ]	 Picture / Format
 Power	 Power
 SV/[ *]	 Zoom / Size
 LP/V=	 Setup / OPT /
 000/[≡I ]	 Guide / EPG / -/--
 Timer/Mute	 Sleep / Timer
 Timer/Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Pause/T	 Pause / Step / Freeze
 M	 Menu / Home
 E	 Exit / Cancel / Clear
 Rec/i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow





Original	Replacement	Original	Replacement
	Audio		Audio / Lang I/II
	[ ]		Picture / Format
	Power		Power
	SV		Display / Media
	LP		Smart / List
	Timer		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	000		0
	M		Menu / Home
	E		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow

