




















 

 


 
 













 
 


 
 




 

 

 




 
 



 






Original	Replacement	Original	Replacement
	Power		Power
	Auto / Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	Title		Smart
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		D. Menu
	LCD Menu		Menu
	DVD Setup		Options
	Input		AV
	P.Mode		Format
	A.Mode		Dual
	Mute		Mute
	Play / Pause		Play
	Stop		Stop





Original	Replacement
 Slow / Step	 Pause
 Audio / Nicam	 +  Shift + Dual
 Text / <<	 Text
 Text / <<	 <<
 >> / Mix	 >>
 Hold / Goto	 +  Shift + Stop
 Picture / Subtitle	 +  Shift + Format
 I<< / Index	 I<<
 >>I / Size	 >>I
 Reveal / Zoom	 +  Shift + Eject
 Subpage /	 +  Shift + Subt
 Picture / Subtitle	 Subt
 Red / Program	 Red
 Green / Intro	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue

Original	Replacement

