

 
 

 


 

 

 

 



 





 

 

 

 
 






| Original | Replacement |
|---|--|
|  Power |  Power |
|  Source Search |  Source |
|  Computer |  Comp / Video |
|  Video |  Shift + Comp / Video |
|  USB |  Mode |
|  LAN |  Shift + Menu |
|  Screen Fit |  Shift + Freeze / Timer |
|  1 |  Shift + Vol + / Page + |
|  2 |  Shift + + / Play |
|  3 |  Shift + Volt / Focus |
|  4 |  Shift + Vol - / Page - |
|  5 |  Shift + - / Stop |
|  6 |  Shift + Help / |
|  7 |  Shift + Eco / Aspect |
|  8 |  Shift + 3D / |
|  9 |  Shift + Blank / Mute |
|  0 |  Shift + Mode |

| Original | Replacement |
|--|--|
|  Auto |  Auto |
|  Menu |  Menu |
|  ID |  3D / Invert |
|  Aspect |  Eco / Aspect |
|  Color Mode |  Shift + Source |
|  Esc |  Shift + Power |
|  Up |  Up |
|  Pointer |  Shift + Enter |
|  Down |  Down |
|  User |  Volt / Focus |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Enter |
|  E-Zoom+ |  + / Play |
|  E-Zoom- |  - / Stop |
|  Vol+ |  Vol + / Page + |
|  Vol- |  Vol - / Page - |



