



Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV
 Mute	 Mute	 Info	 Info
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 FAV	 Pre Ch
 -/-	 Guide	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Shift + Dual
 Sleep	 Sleep	 CH+	 Ch +
 Audio	 Dual	 CH-	 Ch -
 Aspect	 3D	 Red	 Red





Original		Replacement		Original		Replacement	
	Green		Green		Tv/Radio		TV/R
	Yellow		Yellow		Rec		Rec
	Blue		Blue		T-Shift		Media
	Home		Smart		Sub-T		Subt
	Setup		Options				
	Mouse		D. Menu				
	EPG		Shift + Guide				
	Text		Text				
	Stop/Reveal		Stop				
	Play/Pause / Mix		Play				
	Play/Pause / Mix		Pause				
	Index		List				
	<</Hold		<<				
	>>/Subpage		>>				
	I<< / Size		I<<				
	I<< / Size		Format				
	>>I/Cancel		>>I				

