



Original		Replacement		Original		Replacement	
	Power		Power		Input		AV
	Mute		Mute		Info		Info
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		FAV		Pre Ch
	-/-		Guide		P.Mode		Shift + Format
	Recall		Back		S.Mode		Shift + Dual
	Sleep		Sleep		CH+		Ch +
	Audio		Dual		CH-		Ch -
	Aspect		3D		Red		Red





Original	Replacement	Original	Replacement
 Green	 Green	 Tv/Radio	 TV/R
 Yellow	 Yellow	 Rec	 Rec
 Blue	 Blue	 T-Shift	 Media
 Home	 Smart	 Sub-T	 Subt
 Setup	 Options		
 Mouse	 D. Menu		
 EPG	 Shift + Guide		
 Text	 Text		
 Stop/Reveal	 Stop		
 Play/Pause / Mix	 Play		
 Play/Pause / Mix	 Pause		
 Index	 List		
 <</Hold	 <<		
 >>/Subpage	 >>		
 I<< / Size	 I<<		
 I<< / Size	 Format		
 >>I/Cancel	 >>I		

