






 



 
 
 


 
 

 




 


 



 
 






 







 

 


 


 



 
 
 

 



 




Original	Replacement	Original	Replacement
 Power	 Power	 Setup	 Options
 Open/Close	 Eject	 << FR/SR	 <<
 1	 1	 >> FF/SF	 >>
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Sel	 Ok
 7	 7	 I<<	 I<<
 8	 8	 Display	 Info
 9	 9	 >>I	 >>I
 0	 0	 Title	 List
 Clear	 Exit	 Menu	 Menu
 PBC	 Guide	 Marker	 TV/R
 Stop/Return	 Stop	 Angle	 Red
 Play/Pause	 Play	 Subtitle	 Subt
 >I</Step	 Pause	 Audio	 Dual





Original	Replacement	Original	Replacement
 Zoom	 Shift + Eject		
 3D Sound	 3D		
 Repeat	 Text		
 Program	 Sleep		
 Shuffle	 Media		
 Digest	 Yellow		
 A-B	 Shift + Play		
 Vol+	 Vol +		
 Vol-	 Vol -		

