



Original	Replacement
 Power	 Power
 [i+]/Timer	 Info / Angle
 [i+]/Timer	 Sleep / Timer
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 PC	 Shift + Fav / Marker / PC
 Screen Split	 Shift + Red / Netflix /
 Screen Swap	 Shift + Green / APP /
 PIP Swap	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 CH Return	 Guide / EPG / -/--
 0	 0
 CH Enter	 Fav / Marker / PC
 P+	 CH+ / Page+
 I-II	 Audio / Lang I/II
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Return	 Back / Return
 Up	 Up
 Home Menu	 Menu / Home
 Left	 Left
 Enter	 OK





Original	Replacement
 Right	 Right
 Down	 Down
 AV Selection	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [I+]/[≡ ◆]	 Setup / OPT /
 [<>]	 Picture / Format
 [...]	 Subtitle / EQ
 [≡ ?]	 D.Menu / Top
 [≡ i]	 Display / Media
 [≡]	 Text / Goto

Original	Replacement

