


 



 

 
 










 

 



 










Original	Replacement
 Power	 Power
 TV/VCR	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 SP/LP	 Text
 Eject	 Eject
 Rec	 Rec
 Pause	 Pause

Original	Replacement
 <<	 <<
 Play	 Play
 >>	 >>
 Stop	 Stop
 i	 Guide
 OK	 Ok
 Clk / Count	 Shift + Ok
 Clear	 Exit
 UP / CH/Track+	 Ch +
 UP / CH/Track+	 Up
 Down / CH/Track-	 Ch -
 Down / CH/Track-	 Down
 →	 Right
 ←	 Left

