

 













 

 

 

 




 
 



 

 



 



















 

 





 




Original		Replacement		Original		Replacement	
	Standby		Power		Right		Right
	Mute		Mute		Vol+		Vol +
	P/N		Smart		Left		Left
	Open/Close		Eject		Vol-		Vol -
	Play/Pause		Play		Info		Info
	Play/Pause		Pause		Slow		Media
	Stop		Stop		OK		Ok
	<<		<<		1		1
	>>		>>		2		2
	l<<		l<<		3		3
	>>l		>>l		4		4
	Source		AV		5		5
	Setup		Options		6		6
	Up		Up		7		7
	CH+		Ch +		8		8
	CH-		Ch -		9		9
	Down		Down		0		0





Original		Replacement		Original	Replacement
	Program		Sleep		
	Title/TTX		Text		
	Audio		Dual		
	Subtitle		Subt		
	EPG		Guide		
	Return/Exit		Back		
	Favorite		Pre Ch		
	Tv/Radio		TV/R		
	Record		Rec		
	Goto		3D		
	Red/Repeat		Red		
	Green/A-B		Green		
	Yellow/Menu		Yellow		
	Blue/Angle		Blue		

